

CHRISTINA[®]
WATCHES
Swiss Made


USER MANUAL - MODEL 505



 **RONDA**
CAL. 706.B

USER MANUAL - MODEL 505

Movement specification:	RONDA caliber 706.B quartz analog movement with the following displays: Date, day, moon phase and calendar week
Day change:	Tuesday to Sunday approx. midnight; Monday approx. 12.15 a.m.
Date change:	Monday to Sunday approx. 1.30 a.m. to 3.00 a.m.
Change of moon phase:	Monday to Sunday approx. 8.00 p.m.
Change of calendar week:	Monday approx. 12.15 a.m.

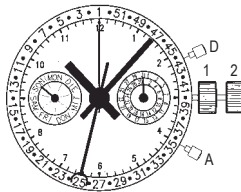

Times during which calendar functions must not be changed (limited time zones)

Calendar functions must not be altered between 11.30 p.m. and 5.30 a.m. because automatic changes are in progress at these times. Pressing the pusher during these times may damage the movement

Setting of time after a battery change

Winding crown position 1

- Normal position Watch is running

Winding crown position 2

- Stop-second Movement stops (interruption of motor pulses)

USER MANUAL - MODEL 505

1. Set moon phase
Set date
Set day

Rotate hands clockwise past midnight until the full moon position appears in the window on the dial. Continue rotating hands until 6.00 a.m. (outside of limited time zone).

With the winding crown turn the hands forwards and backwards past midnight until the day of the last full moon is reached (check calendar) and use the quick-change corrector (pusher **A**) to set the date of the last full moon. Then use the crown to turn the hands forwards until the current date is reached.

You have now set the correct moon phase position, date and day

Quick change correctors

Pusher D at 2 o'clock position

- Quick change corrector for calendar week

Pressing pusher **D** moves the calendar week display forward by one week.

You **must not** use this quick change corrector between 11.30 p.m. on Saturday and 12.45 a.m. on Tuesday because the automatic change mechanism is in operation between these times

Push-piece A at 4 o'clock position

- Quick change corrector for date

Pressing pusher **A** moves the date forward by one day.

You **must not** use this quick change corrector between 11.30 p.m. and 5.30 a.m. because the automatic change mechanism is in operation between these times

Set day

Only possible using the winding crown

Set the watch to 11.30 p.m. and then rotate the hands forward to 12.30 a.m. The day will change to the following day. Repeat this procedure by winding the hands backward and forwards past midnight until you reach the current day of the week. You **must not** use this quick-change corrector between 11.30 p.m. and 5.30 a.m. because the automatic change mechanism is in operation between these times